

## FIRSTVISION<sup>®</sup> Upgrade & Compatibility Information

PN 53569:A1 09/21/2010 10-424

Topic	Page
"FIRSTVISION 2.0 Hardware Restriction"	page 1
"Upgrade Older Configuration Tool Software"	page 1
"Upgrade Old FIRSTVISION Building Sites to FIRSTVISION 2.0 Campus"	page 1
"Compatibility"	page 2
"Floors Supported Per Campus"	page 2

### FIRSTVISION 2.0 Hardware Restriction



**NOTE:** Be sure to check [www.magni-fire.com](http://www.magni-fire.com) for the latest version of the FIRSTVISION Configuration tool **before** you begin upgrading or configuring a site plan.



**CAUTION: Hardware Restriction**

The FIRSTVISION application version 2.x and later runs only on the FIRSTVISION version 2.x hardware, which includes the 19" diagonal LCD screen. Older hardware models of FIRSTVISION cannot be upgraded to run the FIRSTVISION version 2.x application.

### Upgrade Older Configuration Tool Software

Follow these instructions to install the FIRSTVISION 2.0 Configuration Tool on the computer you use to design FIRSTVISION buildings and sites.

1. Unzip the Configuration Tool files into a temporary folder on the target computer.
2. Using Windows Explorer, navigate to the temporary folder, and then double-click the file **setup.exe**.
3. Follow the on-screen prompts.

### Upgrade Old FIRSTVISION Building Sites to FIRSTVISION 2.0 Campus

Site plans from previous versions of FIRSTVISION may be used with FIRSTVISION 2.0, but some additional configuration is required. This may include some or all of:

- Design a campus map screen (site background).
- Arrange multiple buildings on a campus map.
- Set up NFN gateway(s).
- Set up RECCTV gateway, DVR(s) and camera(s).

Before any of this can be done, an older FIRSTVISION site plan must be upgraded to be compatible with FIRSTVISION 2.0. This requires running the included IncidentMonitor Upgrade Wizard. For information and instructions, refer to Section 2.2, “Upgrading a FirstVision 1.7 or 1.8 Campus to a FirstVision 2.0 Campus,” as well as Section 2.3, “Upgrading an Old FirstVision Building Site to FirstVision Campus” in the *FirstVision Configuration Tool Programming Manual*, PN 53035.

## Compatibility

- The FIRSTVISION application version 2.x and later runs only on the FIRSTVISION version 2.x hardware, which includes the 19” diagonal LCD screen. Older hardware models of FIRSTVISION cannot be upgraded to run the FIRSTVISION version 2.x application.
- Site plans from older FIRSTVISION versions are not initially compatible with FIRSTVISION 2.0. For more information, refer to [“Upgrade Old FIRSTVISION Building Sites to FIRSTVISION 2.0 Campus” on page 1](#).
- FIRSTVISION 2.0 is only compatible with NFN gateways version 3.14 and above.

## Floors Supported Per Campus

These numbers are dependent on the sizes of the floorplan background graphics files and on the number of devices on each floor. If the graphics file sizes and the average number of devices per floor are small enough, more floors can be supported.