

SharpEye™

Model FS-1200

UV/IR Flame Simulator

User Guide



8200 Market Blvd, Chanhassen, MN 55317, USA

Phone: +1 (973) 239 8398 Fax: +1 (973) 239 7614

Website: www.spectrex.net Email: spectrex@spectrex.net

Legal Notice

The SPECTREX SharpEye Optical Flame Detector described in this document is the property of Rosemount.

No part of the hardware, software or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, without prior written permission of Rosemount.

While great efforts have been made to assure the accuracy and clarity of this document, Rosemount assumes no liability resulting from any omissions in this document, or from misuse of the information obtained herein. The information in this document has been carefully checked and is believed to be entirely reliable with all of the necessary information included. Rosemount reserves the right to make changes to any products described herein to improve reliability, function, or design, and reserves the right to revise this document and make changes from time to time in content hereof with no obligation to notify any persons of revisions or changes. Rosemount does not assume any liability arising out of the application or any use of any product or circuit described herein; neither does it convey license under its patent rights or the rights of others.

Warranty

SPECTREX agrees to extend to Purchaser/Distributor a warranty on the SPECTREX supplied components of the SharpEye products. SPECTREX warrants to Purchaser/Distributor that the products are free from defects in materials and workmanship for a period of five (5) years, commencing with the date of delivery to Purchaser/Distributor. SPECTREX expressly excludes damage incurred in transit from the factory or other damage due to abuse, misuse, improper installation, or lack of maintenance or "Act of God" which are above and beyond its control. SPECTREX will, upon receipt of any defective product, transportation prepaid, repair or replace it at its sole discretion if found to have been defective when shipped. Said repair or replacement is SPECTREX'S sole liability under this warranty and SPECTREX'S liability shall be limited to repair or replacement of the component found defective and shall not include any liability for consequential or other damages. The customer is responsible for all freight charges and taxes due on shipments both ways. This warranty is exclusive of all other warranties express or implied.

TM380102 Rev. (Ab), March 2018

Table of Contents

Table of Contents	v
List of Figures	vii
List of Tables.....	vii
1 About this Guide	9
1.1 Release History.....	9
1.2 Glossary and Abbreviations	10
1.3 Notifications	11
2 Product Overview	13
2.1 Model and Types.....	13
2.2 Features and Benefits	14
2.3 Principles of Operation.....	14
2.4 Simulator Status.....	14
2.4.1 Normal Status	14
2.4.2 Fault Status	14
2.5 Product Certification	14
2.6 Simulator Structure.....	15
2.7 Certification Instructions.....	17
2.7.1 General Instructions.....	17
2.7.2 Special Conditions for Safe Use.....	18
3 Operation Instructions	19
3.1 Ordering Information.....	19
3.2 Unpacking.....	19
3.3 Operating Instructions	19
3.4 Detection Ranges.....	20
3.5 Charging the Battery	21
3.6 Maintenance.....	22
3.7 Troubleshooting.....	23
3.8 Technical Specifications	23
3.8.1 General Specifications	23
3.8.2 Electrical Specifications.....	23
3.8.3 Physical Specifications	23
3.8.4 EMI Compatibility.....	24

Technical Support 26

List of Figures

Figure 1: Flame Simulator Side View	15
Figure 2: Flame Simulator Rear View	16
Figure 3: Flame Simulator Front View	16
Figure 4: Flame Simulator Battery Replacement	22

List of Tables

Table 1: Flame Simulator Compatibility	20
Table 2: Detection Ranges per Detector/Flame Simulator	20

1 About this Guide

This guide describes the SharpEye Flame Simulator and its features, and provides instructions on how to operate and maintain the simulator.



Note:

This user guide should be read carefully by all individuals who have or will have responsibility for using, maintaining, or servicing the product.

This guide includes the following chapters:

- **Chapter 1, About this Guide**, details the layout of the guide, includes the release history, a glossary and abbreviations, and explains how notifications are used in the guide.
- **Chapter 2, Product Overview**, provides a general overview of the product, principles of operation, and performance considerations.
- **Chapter 3, Operation Instructions**, describes how to operate the simulator, including instructions regarding replacement and charging of the battery.

1.1 Release History

Rev	Date	Revision History	Prepared by	Approved by
0	December 2015	First Release	Ian Buchanan	Eric Zinn
1	December 2015	Second Release	Ian Buchanan	Eric Zinn
2	January 2016	Third Release	Ian Buchanan	Eric Zinn
3	March 2016	Fourth Release	Ian Buchanan	Eric Zinn
4	April 2016	Fifth Release	Ian Buchanan	Eric Zinn
5	May 2016	Sixth Release	Ian Buchanan	Eric Zinn
6	May 2016	Seventh Release	Ian Buchanan	Eric Zinn
7	July 2016	Eighth Release	Ian Buchanan	Eric Zinn
8	January 2017	Ninth Release	Jay Cooley	Ian Buchanan
9	February 2017	Tenth Release	Jay Cooley	Ian Buchanan
10	February 2017	Eleventh Release	Jay Cooley	Ian Buchanan
11	April 2017	Twelfth Release	Jay Cooley	Shaul Serero
Aa	August 2017	Thirteenth Release	Jay Cooley	Shaul Serero
Ab	March 2018	Fourteenth Release	Michal Heller	Udi Tzuri

1.2 Glossary and Abbreviations

Abbreviation/Term	Meaning
Analog Video	Video values are represented by a scaled signal
ATEX	Atmosphere Explosives
AWG	American Wire Gauge
BIT	Built-In-Test
CMOS	Complementary Metal-Oxide Semiconductor image sensor
Digital Video	Each component is represented by a number representing a discrete quantization
DSP	Digital Signal Processing
EMC	Electromagnetic Compatibility
EMI	Electromagnetic Interference
EOL	End of Line
FOV	Field of View
HART	Highway Addressable Remote Transducer – communications protocol
IAD	Immune at Any Distance
IECEX	International Electro-Technical Commission Explosion
IP	Internet Protocol
IPA	Isopropyl Alcohol
IR	Infrared
IR3	Refers to the 3 IR sensors in the VID
JP5	Jet Fuel
LED	Light Emitting Diode
MODBUS	Serial communications protocol using Master-Slave messaging
N/A	Not Applicable
N.C.	Normally Closed
NFPA	National Fire Protection Association
N.O.	Normally Open
NPT	National Pipe Thread
NTSC	National Television System Committee (a color encoding system)
PAL	Phase Alternation by Line (a color encoding system)

Abbreviation/Term	Meaning
P/N	Part Number
RFI	Radio Frequency Interference
RTSP	Real Time Streaming Protocol
SIL	Safety Integrity Level
UNC	Unified Coarse Thread
VAC	Volts Alternating Current

1.3 Notifications

This section explains and exemplifies the usage of warnings, cautions, and notes throughout this guide:



Warning:

This indicates a potentially hazardous situation that could result in serious injury and/or major damage to the equipment.



Caution:

This indicates a situation that could result in minor injury and/or damage to the equipment.



Note:

This provides supplementary information, emphasizes a point or procedure, or gives a tip to facilitate operation.

2 Product Overview

To comply with local standards and jurisdictional authorities, "end-to-end" loop testing of fire protection alarm systems, including detectors, should be performed periodically. Many safety authorities and plant managers of high-value/high-risk assets and facilities insist on quarterly "end-to-end" testing of their entire fire protection systems using an external flame simulator.

SPECTREX flame simulators emit electromagnetic radiation in a unique sequential pattern corresponding to and recognizable as fire by specific SharpEye Flame Detector models. This allows for testing under real fire conditions without the associated risks of an open flame. SPECTREX flame simulators are ATEX certified EExd for use in hazardous zones 1 and 2, and are powered by rechargeable lithium-ion batteries. When fully charged, the flame simulator operates for at least 100 tests without recharging.

Starting fires in hazardous locations is not permitted, and can be dangerous in non-hazardous locations. Using an external, portable SPECTREX flame simulator is the best means to perform a complete, functional "end-to-end" test of the detector and the fire protection system without the need to start an actual fire. The SPECTREX flame simulator is the only non-hazardous and safe method to test the flame detector's sensors, internal electronics, alarm activation software, cleanliness of the viewing window/lens, wiring integrity, actual relay activation, and proper functionality of any other outputs used (mA, RS-485, HART).



Warning:

The Simulator is not field-repairable due to the meticulous alignment and calibration of the sensors and the respective circuits. Do not attempt to modify or repair the internal circuits or change their settings, as this will impair the system's performance and void the SPECTREX product warranty.

2.1 Model and Types

The FS-1200 Flame Simulator is compatible with several detector types:

Simulator	P/N	Compatible with:
UV/IR Flame Simulator	FS-1200	40/40L-LB, 40/40L4-L4B, 40/40U-UB, 40/40UFL 20/20ML

2.2 Features and Benefits

- Used for maintenance and testing of flame detectors
- Ability to activate the flame detector from a distance of up to 10m
- Rechargeable battery included
- Operates at least 100 tests before battery recharge is necessary

2.3 Principles of Operation

The **FS-1200** includes a halogen lamp that emits UV and IR energy. This energy is accumulated by a reflector and directed towards the detector.

The **FS-1200** does not include a laser diode. It includes only a mechanical sight, as the user can see the spot from the simulator and should aim the spot toward the center of the detector.

2.4 Simulator Status

The status of the simulator is defined by the halogen light. There is no laser.

2.4.1 Normal Status

At normal status, the light flashes for 50 seconds. After 50 seconds, the simulator cannot operate for 20 seconds (delay between activations).

2.4.2 Fault Status

If the light does not turn on, this indicates 1 of 3 possible faults:

- Low battery
- Halogen fault
- Total failure

2.5 Product Certification

The Flame Simulator Model FS-1200 is certified to ATEX and IECEx:

Ex II 2 G

Ex db ib op is IIB + H2 T5 Gb

-4°F to +122°F / -20°C to +50°C

The Flame Simulator Model FS-1200-R is certified per TR CU/EAC:

1Ex db ib op is IIB+H2 T5 Gb X

-20°C ≤ Ta ≤ +50°C

This product is suitable for use in hazardous zones 1 and 2 with IIB + H2 gas group vapor present.

2.6 Simulator Structure

The flame simulator is built from black coated aluminum housing. It includes the following components:

- Reflector
- Electronic chamber
- Battery chamber
- Handle

The electronic chamber includes a PC Board with an IR or halogen lamp. The lamp is assembled on the PC Board and emits light through the sapphire window.

The battery chamber includes a battery pack containing 4 lithium-ion batteries, measuring a total of 14.8VDC and 2.2Ah.

The battery pack can be replaced easily by opening the back cover. This procedure must be executed in a safe area using only a SPECTREX battery pack, P/N 380004.



Figure 1: Flame Simulator Side View

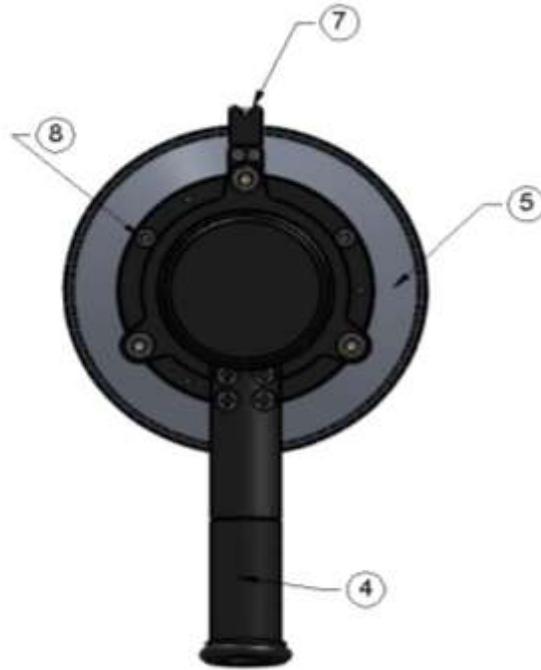


Figure 2: Flame Simulator Rear View

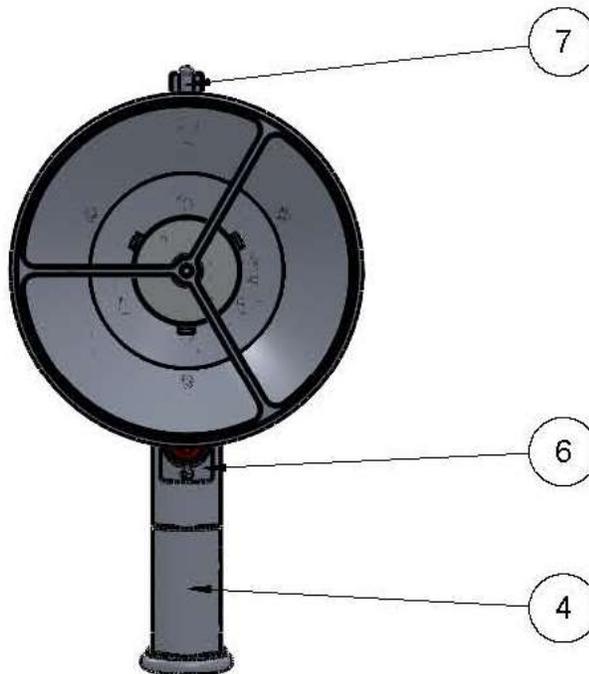


Figure 3: Flame Simulator Front View

1	Electronic Chamber	5	Reflector
2	Battery Chamber	6	Push Button
3	Battery Back Cover	7	Sight
4	Handle	8	Back Cover Locking Screw

2.7 Certification Instructions

2.7.1 General Instructions

The equipment marking is defined as follows:

Ex II 2 G

Ex db ib op is IIB + H₂ T5 Gb

-20°C to +50°C / -4°F to +122°F

- The equipment may be used with flammable gasses and vapors with apparatus groups IIA and IIB+H₂ T5 in the ambient temperature range of -4°F to +122°F / -20°C to +50°C.
- Inspection and maintenance of this equipment should be performed by suitable trained personnel, in accordance with the applicable code of practice, e.g. EN 60079-17.
- Repair of this equipment should be performed by suitable trained personnel, in accordance with the applicable code of practice e.g. EN 60079-19.
- Certification of this equipment relies upon use of the following materials in its construction:
 - Enclosure: Aluminum 6061T6
 - Window: Sapphire glass
 - Seals: EPDM
- If the equipment is likely to come into contact with aggressive substances (described below), then it is the responsibility of the user to take suitable precautions (described below) to prevent the equipment from being adversely affected. This ensures that the type of protection provided by the equipment is not compromised.
 - Examples of aggressive substances: acidic liquids or gases that may attack metals or solvents, or may affect polymeric materials.
 - Examples of suitable precautions: routine inspections, establishing resistance to specific chemicals from the material's data sheets.

2.7.2 Special Conditions for Safe Use

- The dimensions of the flameproof joints are other than the relevant minimum or maximum values required by Table 2 of IEC/EN 60079-1:2007 for IIB + H2, as detailed below:

Flamepath Description	Type of Joint	Minimum Width "L" (mm)	Maximum Gap "ic" (mm)
Joint formed by window against the enclosure	Flanged	10.75	0.02
Enclosure end-cap spigot	Cylindrical	15	0.08

Gaps should not be machined to be any larger than the values of "ic," and width should not be modified to be any smaller than the values of "L," as shown in the table above.

- The equipment should only be charged in a safe area. Batteries must be removed from the flameproof enclosure. The charge conditions are as follows:
 - Maximum charge voltage: 4.2V per cell
 - Maximum charge current: 2200mA

The charge voltage and current should not exceed these values.

3 Operation Instructions

3.1 Ordering Information

The P/N of the Flame Simulator Kit is 380114-2.

The kit is supplied in a carry case that includes:

- Flame Simulator FS-1200
- Charger
- Tool Kit
- Technical Manual TM380102

3.2 Unpacking

Verify that you have received the following components:

- Delivery form
- Flame simulator with integral battery
- Battery charger
- Tool keys
- User manual
- FAT forms
- EC declaration
- Storage case

3.3 Operating Instructions



Warning:

Do not open the flame simulator in a hazardous area to charge the batteries or for any other reason.



Caution:

The following test simulates real fire conditions and may activate the extinguishing system or other alarms. If this is not desired, disconnect/inhibit them before the test and reconnect after simulation.

- 1 Verify you are using the correct simulator that fits the tested detector, per the following table:

Table 1: Flame Simulator Compatibility

Simulator	Compatible with:
FS-1200	40/40L-LB, 40/40L4-L4B, 40/40U-UB, 40/40UFL, 20/20ML

- 2 Verify you are at the correct distance from the detector according to the type of detector and the detector sensitivity (see *Detection Ranges* on page 20).
- 3 Using the mechanical sight, aim the flame simulator toward the center of the detector.
- 4 Push the activate button; then use the spot for fine adjustment toward the center of the detector.
- 5 Keep the simulator aimed at the detector for up to 50 seconds until you trigger an alarm.
- 6 Wait 20 seconds before repeating the test.

3.4 Detection Ranges

Table 2: Detection Ranges per Detector/Flame Simulator

Model	Detector Types	Detector Sensitivity Setting (ft/m)	Testing Distance (ft/m)
FS-1200	40/40U-UB, 40/40L-LB, 20/20ML	50/15	20/6
	40/40L4-L4B	93/28	8/2.5
	40/40UFL	60/20	23/7



Notes:

- The minimum distance from the detector is 30"/75cm.
- At extreme temperatures there is a 15% reduction in the testing range.



Warning:

Keep the flame simulator in a safe place when not in use.

3.5 Charging the Battery

The flame simulator uses lithium-ion batteries as a rechargeable power source. When the batteries are fully charged, the simulator operates at least 100 times without recharging. When the voltage from the batteries is lower than the required operational level, the simulator will not operate.

■ To charge the battery:

- 1 Place the flame simulator on a table in a safe area, not exceeding 104°F/40°C.
- 2 Release the locking screw (Figure 1, Item 8).
- 3 Unscrew the battery back cover counterclockwise (Figure 1 and Figure 4, Item 3).
- 4 Unscrew the locking disc clockwise (Figure 4, Item 4).
- 5 Pull out the battery from the flame simulator (Figure 4, Item 2).
- 6 Connect the battery to the charger. Verify that the charger is supplied with the flame simulator.
- 7 Charge for a maximum of 2–3 hours.
- 8 Disconnect the charger.
- 9 Insert the battery into the flame simulator (Figure 4, Item 2).
- 10 Screw on the locking disc (Figure 4, Item 4).
- 11 Screw on the back cover (Figure 1 and Figure 4, Item 3).
- 12 Lock the back cover with the locking screw (Figure 1, Item 8).

■ To replace the battery:

- 1 Place the flame simulator on a table in a safe area, not exceeding 104°F/40°C.
- 2 Release the locking screw (Figure 1, Item 8).
- 3 Unscrew the battery back cover counterclockwise (Figure 1 and Figure 4, Item 3).
- 4 Unscrew the locking disc clockwise (Figure 4, Item 4).
- 5 Pull out the battery from the flame simulator (Figure 4, Item 2).
- 6 Insert the new battery pack in the simulator housing. Use only a SPECTREX battery pack, P/N 380004.

- 7 Screw on the locking disc (Figure 4, Item 4).
- 8 Screw on the back cover (Figure 1 and Figure 4, Item 3).
- 9 Lock the back cover with the locking screw (Figure 1, Item 8).



1	Simulator
2	Battery Pack
3	Back Cover
4	Locking Disc

Figure 4: Flame Simulator Battery Replacement

3.6 Maintenance

- Ensure the flame simulator is charged before operation.
- Ensure the reflector and window are clean.
- Before replacing the battery, check that you have a SPECTREX Battery Pack, P/N 380004.
- When the simulator is not in use, recharge at least every 6 months.



Warning:

Use only a SPECTREX Replacement Battery Pack, P/N 380004.

3.7 Troubleshooting

Model	Problem	Solution
FS-1200	The light does not turn on	<ol style="list-style-type: none"> 1. Recharge the battery. 2. Replace the battery. 3. Send the flame simulator for repair.
	Flame simulator seems to work properly but does not activate the detector	<ol style="list-style-type: none"> 1. Verify that you are at the correct distance. 2. Verify that the flame detector is at the correct sensitivity. 3. Verify that the flame detector is operating. 4. Verify that the flame detector window and/or reflector are clean.

3.8 Technical Specifications

3.8.1 General Specifications

- Operating temperature: +32°F to +122°F / 0°C to +50°C
- Vibration protection: 1g (10–50Hz)

3.8.2 Electrical Specifications

- Power: 14.8V (4 x 3.7V rechargeable lithium-ion battery)
- Max. current: 4A
- Battery capacity: 2.2Ah
- Charging time: 2hr at 2A

3.8.3 Physical Specifications

- Dimensions: 9" x 7.3" x 5.35" / 230 x 185 x 136 mm
- Weight: 5.5lb/2.5kg
- Enclosure: aluminum, heavy duty copper free, black zinc coating.
- Explosion proof enclosure:
 - ATEX and IECEx
 - Ex II 2 G D
 - Ex db ib op is IIB + H2 T5 Gb
 - Ex ib op is tb IIIC T135°C Db
 - 20°C to +50°C / -4°F to +122°F
 - TR CU/EAC
 - 1Ex db ib op is IIB+H2 T5 Gb X

-20°C ≤ Ta ≤ +50°C

- Water and dust tight: IP65

3.8.4 EMI Compatibility

Immunity Tests		
Title	Basic Standard	Level to be tested
Electrostatic Discharge (ESD)	IEC 61000-4-2	6kV/8kV contact/air
Radiated Electromagnetic Field	IEC 61000-4-3	20V/m (80MHz–1GHz) 10V/m (1.4–2GHz) 3V/m (2.0–2.7GHz)
Conducted Disturbances	IEC 61000-4-6	10 Vrms (150kHz–80MHz)
Immunity to Main Supply Voltage Variations	MIL-STD-1275B	

Emission Tests			
Title	Basic Standard	Level to be Tested	Class
Radiated Emission	IEC 61000-6-3	40dbuv/m (30–230MHz), 47dbuv/m (230MHz–1GHz)	Like Class B of EN 55022

Technical Support

For technical assistance or support, contact:



8200 Market Blvd
Chanhassen, MN 55317
USA

Phone: +1 (973) 239 8398
Fax: +1 (973) 239 7614
Email: spectrex@spectrex.net
Website: www.spectrex.net

Your Local SPECTREX Office:

Texas (USA)

Mr. Jay Cooley, Regional Sales Manager
16203 Park Row, Suite 150
Houston, Texas 77084
USA

Phone: +1 (832) 321 5229
Email: jay.cooley@emerson.com

Far East

Mr. Deryk Walker, Regional Sales Manager
59 Fen Ji Hu, Danshui
Taipei County 25163
Taiwan (ROC)

Phone: +886 2 8626 2893
Mobile: +886 926 664 232
Email: deryk.walker@emerson.com