

12 Clintonville Road  
Northford, CT 06472-1653  
Phone: 203.484.7161

# XP10-M Ten Input Monitor Module

**SPECIFICATIONS**

Normal Operating Voltage:	15-32 VDC
Stand-By Current:	3.75 mA @ 24V
Alarm Current:	55 mA (assumes all ten LEDs solid on)
Temperature Range:	32°F to 120°F (0°C to 49°C)
Humidity:	10 to 85% Noncondensing
Dimensions:	6.8"H x 5.8"W x 1.25"D
Accessories:	CHS-6 Chassis; BB-25 Cabinet; BB-XP Cabinet; CAB-3 Series Cabinet; CAB-4 Series Cabinet
Wire Gauge:	12-18 AWG
Maximum SLC Wiring Resistance:	40 Ohms
Maximum IDC Wiring Resistance:	1500 Ohms
Maximum IDC Voltage:	10.2 VDC
Maximum IDC Current:	240µA (each circuit)

**BEFORE INSTALLING**

If the modules will be installed in an existing operational system, inform the operator and local authority that the system will be temporarily out of service. Disconnect the power to the control panel before installing the modules. This system contains static sensitive components. Always ground yourself with a proper wrist strap before handling any circuits so that static charges are removed from the body. The housing cabinet should be metallic and suitably grounded.

**NOTICE:** This manual should be left with the owner/user of this equipment.

**GENERAL DESCRIPTION**

The XP10-M Ten Input Monitor Module is intended for use in an intelligent alarm system. Each monitor module is intended to interface between a control panel and normally open contact devices, such as pull stations. A common SLC input is used for all modules, and the initiating device loops share a common supervisory supply and ground. Otherwise, each monitor operates independently from the others. Each module has its own unique address.

A pair of rotary code switches is used to set the address of the first module from 01 to 150. The remaining modules are automatically assigned to the next nine higher addresses. Provisions are included for disabling a maximum of two unused modules to release the addresses to be used elsewhere. Each module also has panel controlled green LED indicators. The panel can cause the LEDs to blink, latch on, or latch off.

**Included:**

- (6) 1 x 4 Terminal Blocks      (2) 1 1/4" (32mm) Stand offs



- (4) Machine Screws      (3) Shunts



- (10) 47k Ohm End of Line Resistors



- (2) Nuts



C0202-00

**Shipped on Board:**

- (1) Shunt in Class A/B position  
(Shipped in Class B position, remove shunt for Class A)

**COMPATIBILITY REQUIREMENTS**

To ensure proper operation, this module shall be connected to a compatible Notifier system control panel.

**COMPONENTS**


Following are descriptions of the XP10-M mounting frameworks. There are two mounting options for XP10-M modules:

- Up to six XP10-M modules can be installed on a CHS-6 in a CAB-3 Series cabinet, CAB-4 Series cabinet or BB-25 cabinet.
- One or two XP10-M modules can be installed in a BB-XP cabinet.

**Chassis**


The CHS-6 chassis is used to mount XP10-M modules in a BB-25, CAB-3 or CAB-4 Series cabinet. It accommodates up to six XP10-M modules in a single cabinet row three modules wide and two modules deep.

**FIGURE 1. CHS-6 CHASSIS:**

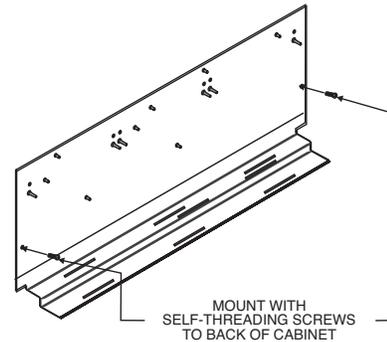

The BB-XP cabinet has a built-in chassis that will accommodate one or two XP10-M modules.

**FIGURE 2. BB-XP CABINET:**

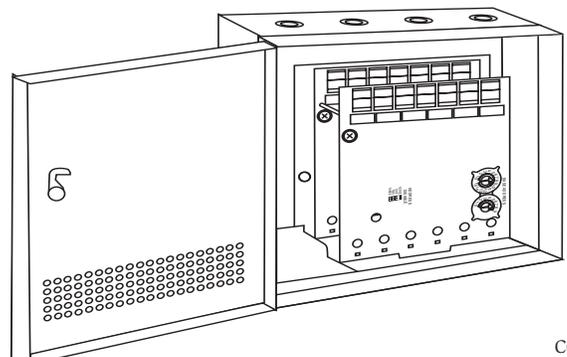

The front XP10-M module positions of each chassis are offset below the rear XP10-M module positions so that all of the status indicators are visible.

**CABINETS**

A BB-25, CAB-3 or CAB-4 Series cabinet will house the CHS-6 chassis with up to six XP10-M modules installed on it. Refer to cabinet installation documents for dimensions.

The BB-XP cabinet houses one or two XP10-M modules on the internal chassis that is part of the cabinet. Refer to cabinet installation documents for dimensions.

**INSTALLATION STEPS**

**1. Cabinet Mounting**


In a clean, dry area, mount the backbox using the four holes provided in the back surface of the cabinet (Figure 3).

**2. Chassis Installation**

The CHS-6 chassis is mounted in the BB-25, CAB-3 or CAB-4 Series cabinet. It is shipped with two self-threading screws, which are used to fasten the chassis to the back wall of the cabinet (see Figure 4).


The BB-XP cabinet comes with the chassis already installed, so no mounting is necessary.

**FIGURE 3. TYPICAL MOUNTING HOLE LOCATIONS:**

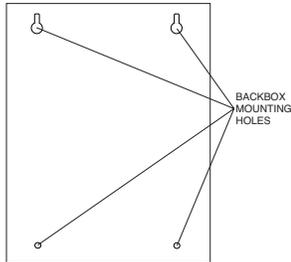

C0235-00

**FIGURE 4. MOUNTING THE CHS-6 CHASSIS:**

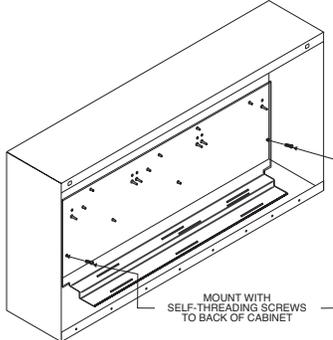


C0236-00

**3. Module Installation**

There are two methods for installing a module in the rear position of a chassis. Method one is for installation of a rear module only, when no module will be installed in front of it. Refer to Figure 5 for instructions. Method two is for installation of a rear module when another module will be installed in the chassis position in front of it. Refer to Figures 6a and 6b for method two. All necessary screws and standoffs are supplied with the modules.

**FIGURE 5. INSTALLATION OF REAR MODULE ONLY, METHOD ONE:**

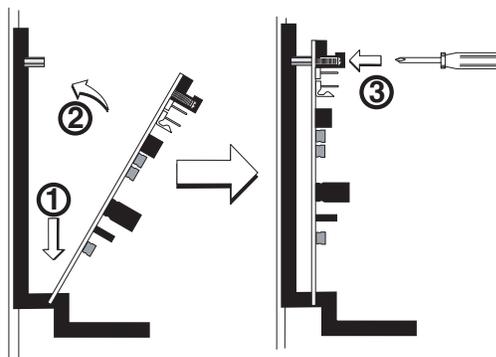

C0237-00

Step 1: Insert the bottom of the XP10-M module down into a rear slot on the chassis.


Step 2: Carefully swing the upper edge of the board back towards the back of the chassis until it touches the two standoffs.

Step 3: Align two 4-40 screws with the two standoffs and tighten.

Step 4: Address and wire the modules according to the instructions in this manual.

The steps in Figures 6A – 6C describe and illustrate module installation when the rear chassis position and the position in front of it will be filled. Front position installation is possible only if the rear position is filled with an XP module.


**FIGURE 6A. INSTALLATION OF XP10-M MODULE IN A REAR CHASSIS POSITION, METHOD TWO:**

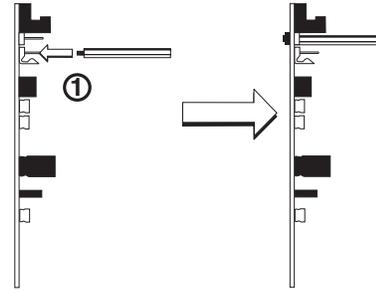

C0225-01

Step 1: Install two long standoffs in the lower mounting holes using two 4-40 nuts as shown.

**FIGURE 6B.**

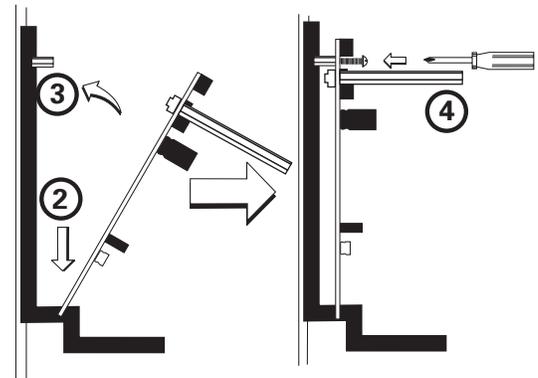

C0249-01


Step 2: Insert the bottom of the XP10-M module down into a rear slot on the chassis.

Step 3: Carefully swing the upper edge of the board back towards the back of the chassis until it touches the two standoffs on the board.

Step 4: Align two 4-40 screws with the two standoffs on the chassis and tighten.

Step 5: Address and wire the modules according to the instructions in this manual.

**FIGURE 6C. INSTALLATION OF XP10-M MODULE IN FRONT CHASSIS POSITION:**

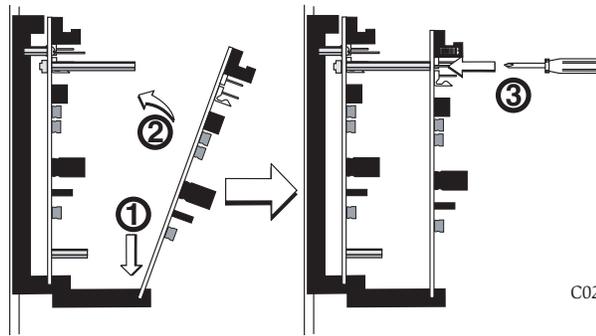

C0226-01

- Step 1: Insert the bottom edge of the XP10-M module down into a front slot of the chassis.
- Step 2: Carefully swing the upper edge of the board towards the back of the chassis until it touches the 11/4" (31.75mm) standoffs installed on the rear module.
- Step 3: Align two 4-40 screws with the two standoffs and tighten. C0227-00
- Step 4: Address and wire the modules according to the instructions in this manual.

**WIRING**

NOTE: All wiring must conform to applicable local codes, ordinances, and regulations.

1. Install module wiring in accordance with the job drawings and appropriate wiring diagrams.
2. All wiring to the XP10-M is done via terminal blocks. In order to properly make electrical connections strip approximately 1/4" of insulation from the end of wire, sliding the bare end of the wire under the clamping plate screw.
3. Set the address on the modules per the job drawing. Use the rotary code switches to set the address of the first module (between 01 and 150).

In Class B operation, the remaining modules are automatically assigned to the next nine higher addresses. For example, if the base address switch is set to 28, the next nine modules will be addressed to 29, 30, 31, 32, 33, 34, 35, 36, and 37.


The module is shipped in Class B position, remove shunt for Class A. When operating in Class A, alternate modules are paired together (+ 0/+ 1, + 2/+ 3, + 4/+ 5, + 6/+ 7, + 8/+ 9), resulting in a total of five modules. For example, if the base address switch is set to 28, then 30, 32, 34 and 36 will be automatically assigned to the modules while 29, 31, 33, 35 and 37 are available to be used for other modules on the SLC. For Class A and B operation, DO NOT set the lowest address above 150, as the other modules will be assigned to nonexistent addresses.

NOTE: All references to power limited represent "Power Limited (Class 2)".

NOTE: The XP10-M must have power cycled for shunt changes to take effect.

NOTE: Some panels support extended addressing. In order to set the module above address 99 on compatible systems, carefully remove the stop on the upper rotary switch (see Figure 7). If the panel does not support extended addressing, do not set the lowest address above 90.

**FIGURE 7:**

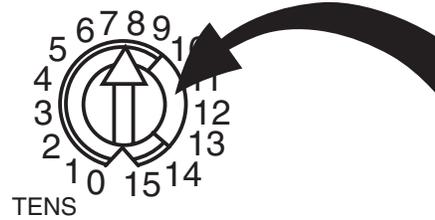

NOTE: Power must not be applied to the unit when changing functionality of the shunts.

4. A shunt is provided to disable a maximum of two unused modules in Class B operation and one unused module in Class A operation. Modules are disabled from the highest address and work downward. If two modules are disabled, the lowest eight addresses will be functional, while the highest two will be disabled. For example, in Class B operation, if the shunt for Address Disable is placed on "two" and the base switch is set to 28, the modules will be assigned to 28, 29, 30, 31, 32, 33, 34 and 35 while disabling the highest two positions.
5. A communications loss feature is available on some panels. Upon a communication loss, due to a microprocessor failure at the control unit, the XP10-M will send a signal to the control unit to activate the notification device circuits upon initiating of an alarm on the XP10-M. A single shunt is used to enable (shunt on) or disable (shunt off) this feature for all modules on the board.

NOTE: Place unused shunts on single pin to store on board for future use.

**WIRING NOTES**

Power-limited circuits must employ type FPL, FPLR, or FPLP cable as required by Article 760 of the NEC.

**PROGRAMMING**

The XP10-M module operates with the following Fire Alarm Control Panels:

- AM2020/AFP1010
- AFP-200
- AFP-300/AFP-400
- S-5000 with AIM-200
- AFC-600
- NFS-640
- NFS-3030

The modules are programmed as devices in each system according to the programming instructions in the appropriate FACP manual.

**FCC STATEMENT**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

